



## Technical Letters

### How To Order A Hot Runner Temperature Control System

- How many zones of control are required?
- Amperage required per zone (15A or 30A)?
- Communications Capability?
- Specify type of control modules (UATC-20 or S20-D3C)
- Specify the main frame: Size of main frame required for the number of control modules - Note: Contact factory for combination main frames (15A and 30A together).
- Specify cables and connectors.
- Choose optional accessories: Terminal mounting boxes, Connectors, Floor stands, Blank panels - Note: 60 Hz and °F are standard. Specify 50 Hz and/or °C when ordering.



National Plastic Heater, Sensor and Control Inc.

[sales@nphheaters.com](mailto:sales@nphheaters.com)

[www.nph-processheaters.com](http://www.nph-processheaters.com)

Toll Free: 1-877-674-9744

Tel: 905-859-8225 Fax: 905-859-4691

Terms and conditions posted below apply:

[www.nph-processheaters.com](http://www.nph-processheaters.com)

